



SPECIFICATIONS

 
Please read the specifications before using the product first time. As per the using manual, you will know all functions of the product, and please keep the specifications for reference in the future.

Installation

Please finish the installation of the controller and led strip as per the following steps for using this product first time.

1. Installation of the controller and led strip.

Please insert the green connection terminal to the controller port on the corresponding, the black connection line is the input line of the power, connect the DC12V power adapter.

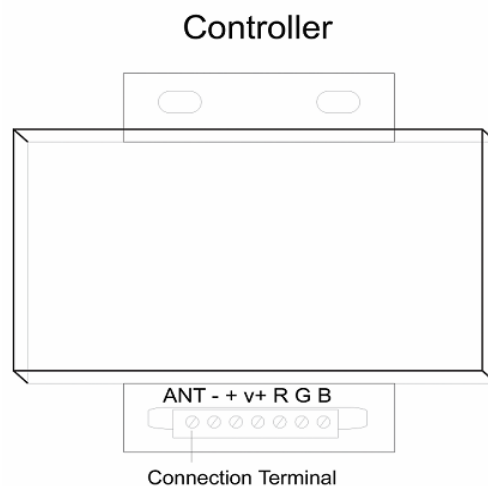 


2. Installation of the telecontroller battery.


Open the battery cover which on the back of the telecontroller, load 3 AAA batteries correctly as per the positive and negative instructions in the battery pack.


Notice: When load the battery, please keep not to touch the color ring or use the palm to cover the color ring, use the telecontroller after 10 seconds. If happening the situation of touching color ring without reaction after change the battery, please take off the batteries, and reload the battery after 10 seconds,


Press-key function of the telecontroller as follow:

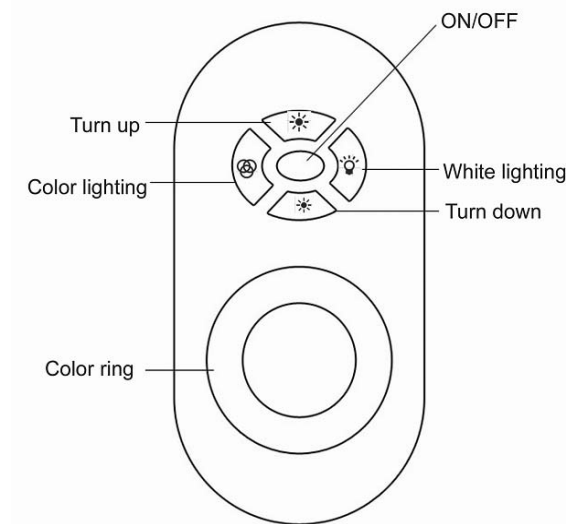 



1、Key-press of the switch: red key, switch on or switch off.

2、 Color lighting: control the lamp into the color lighting mode, press 3 seconds after into the color lighting mode, it can control the lamp into the color gradient mode, the light can change the color automatically, if keeping the morden color, please press the key again.

3、 White lighting: control the led strip into the white lighting mode, RGB all light.

4、 Turn up the light: it can control the brightness of the lamp increase in any modes, it can increase one grade after pressing one time, the total is 8 grades.

5、 Turn down the light: it can control the brightness of the lamp reduction in any modes, it can reduce one grade after pressing one time, the total is 8 grades.

6、 Color ring: in the color lighting mode, slide the finger on the color ring, choose the color you need optionally, and the color ring is only effective for the body finger.

Matching of telecontroller and lamp

After finishing the matching of telecontroller and lamp, it can achieve the wireless control of telecontroller to lamp. The distance of wireless control is about 20 meters. One telecontroller can simultaneously control all valid code within the context of good lighting, please operate as per the following ways:

1. The matching of telecontroller and lamp: in the 3 seconds of connecting power and lamp light, press any keys of the telecontroller, the lamp will blinker 3 times, the code is successful, the lamp will be controlled by the telecontroller.
2. Please as per the above way to operate the code one by one, it can finish the control of one to many.
3. Clear away the code: when you don't want to use the telecontroller to control the lamp, press any keys 3 times, the lamp will blinker 6 times quickly, clearing way is successful, the lamp cannot be controlled by any telecontroller, if need to use matching

again, repressing the NO.1 matching operation can be used normally.

4. It can't affect the finished matching after changing the battery, no need additional setting after loading the new battery, it can be used directly.

Safety Items

- 1、 Far way from the liquid gas or moisture.
- 2、 The product is only suited for the indoor, please don't use it in the wet places, such as the bathroom or wet conditions in outdoor.
- 3、 Don't play for the little child.
- 4、 Please don't put the lamp on the hot surface.
- 5、 For the safety and as per the guarantee items, please don't open the power supply、 controller or telecontroller.

Common Faults and Exclusion

If you encounter one of the following conditions:

- 1、 LED Lighting have no rapid response for the telecontroller.
 - Please check the battery state of the telecontroller, please change the battery in time if no electricity or less electricity.
 - The communication between telecontroller and lamp will get the congested effect of the wireless data network, such as the wireless router. Please move away the wireless data network or the lamp.
- 2、 No light for the lamp.
 - Please check the connector if connecting correctly.
 - Please check the situation of the telecontroller battery.
 - Please check the power switch if on.
- 3、 The lamp appears strange operation automaticly
 - Possible cause: the lamp may be controlled by other controllers, please clear away all code as per the second way of clearing away, reoperating the matching can be used normally.

Clean and Maintain

Please use the dry and soft cloth to clean the lamp and telecontroller, please don't use the detergent, in order to avoid surface was damaged.

Warranty and Service

:

Environment Protect

If you want to dispose the old or discarded the lamp, please dispose them as per the rules of the local management organization, please send the batteries to the collection place which official appointed or other pro-environmental ways to dispose.