

DEMASLED

96*125mm

Dual White Remote Control User Instruction[0141]

Thanks for your purchase !


This manual describes two types of remote controls with same functions.

Both remotes can control the dual white (warm white~cool white) led lights up to four different zones. It controls the intensity and color temperature in all groups.

In this manual, you will learn about:

- Basic functions of both the remote controls:
- Linking new lights to the remote controls:
- Grouping multiple lights:

Basic control functions

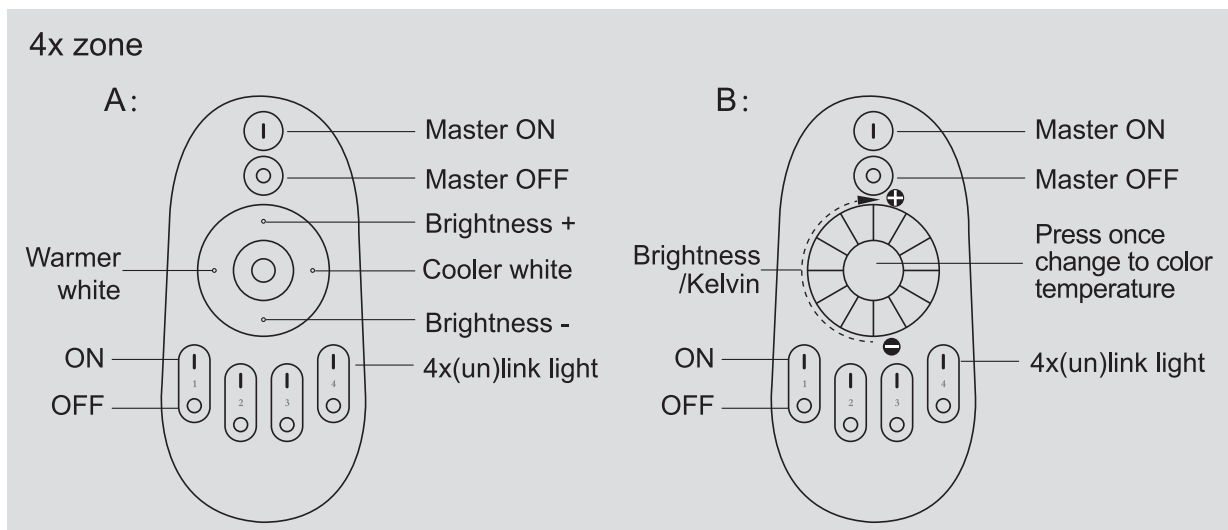

Tips

. To dim all dual white lights at once or change the color temperature, first press 'Master ON'. To do this with individual lights, first press 'Zone ON'. Secondly, set the adjustment for color temperature or brightness.

. To turn on the night light mode of a single(dual white) light, press and hold the 'Zone OFF' from one of the 4 Zones. To turn on all the lights in night light mode, press and hold 'Master OFF'. The lights now consume only 0.4watts.

.For remote control B, the default mode is to adjust the brightness, rotating the wheel from left to right, brightness up, from right to left, brightness down. Switch to adjust the color temperature by pressing the middle button once, left to right, cooler, right to left, warmer.

DEMASLED

96*125mm

Linking new lights to the remote controls:


1. Choose which zone you want to assign the light(1 to 4)
2. Switch off the main power supply of the light in the selected zone with the main switch or pull the plug from the socket.
3. Now switch on the light again and within 3 seconds shortly press one of the 'Zone ON' buttons one time on the remote control.
4. When this link operation is successful, the light slowly blinks 3 times on and off.

Unlinking the white lights:

1. Check via the remote control to see which zone (1 to 4) is already linked to a light.
2. Switch off the main power supply of the light with the main switch or pull the plug from the socket.
3. Now switch on the light again and within 3 seconds press 5 times quickly and shortly on one of the 'Zone ON' buttons which you wan to link.
4. When this unlink operation is successful, the light quickly blinks 10 times on and off.

Grouping of several dual white lights

You can add an endless numbers of lights to a zone on the 4 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

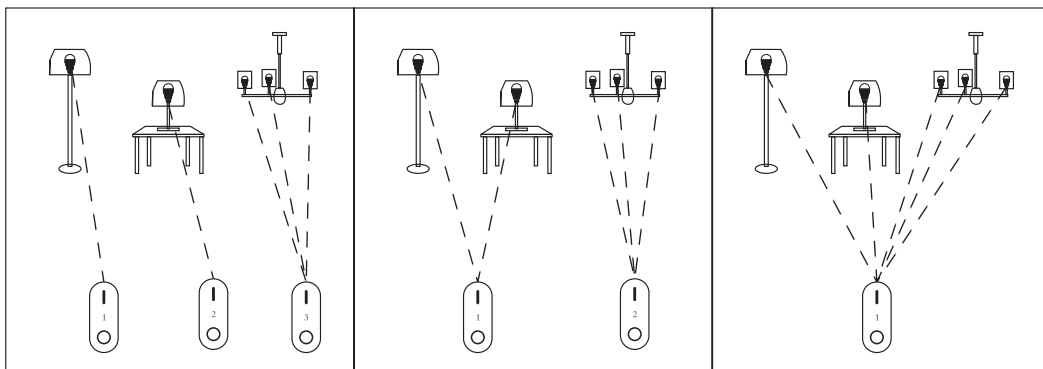

Good to know that one dual white light can connect with up to four different remote controllers , that is 16 unique zones!

We recommend using rechargeable batteries for the remote controls.

For that reason, we don't include ordinary batteries. We hope you appreciate our environmental friendly choices and they do not cause you any inconvenience.